
ADJACENT PROPERTY: 150 W BOSTON

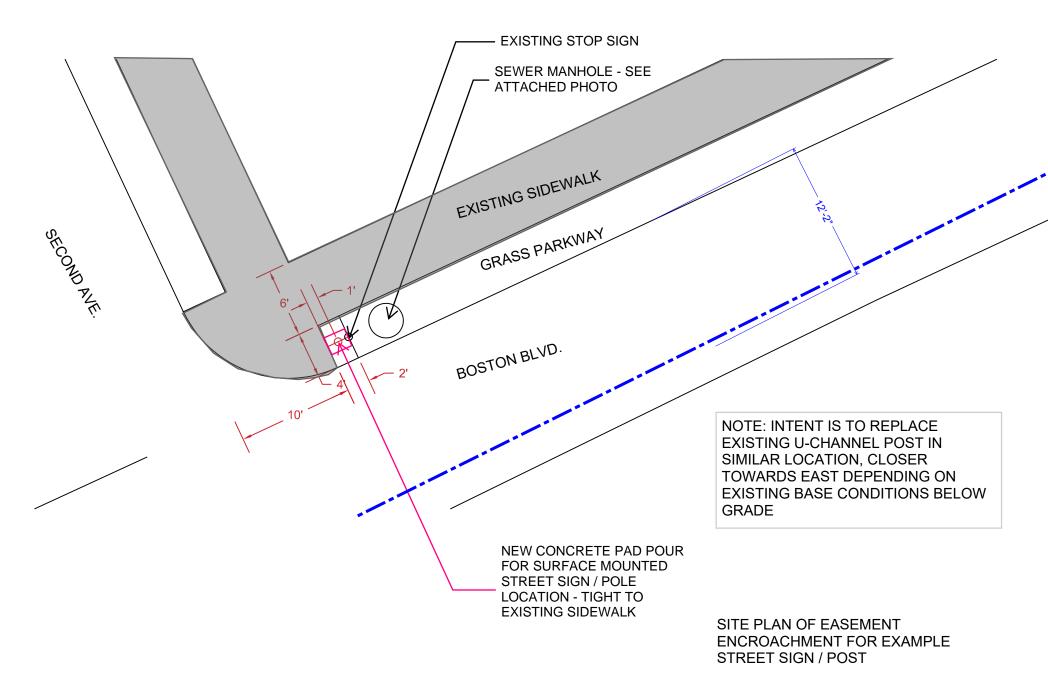



EXISTING PHOTO OF STREET SIGN / MANHOLE COVER - LOOKING TOWARDS BOSTON BLVD.



EXISTING PHOTO OF STREET SIGNS AND POST - ONE WAY SIGNS (BACK TO BACK) AND STOP SIGN TO BE SALVAGED FOR RE-INSTALLATION ON NEW POST


EXISTING STOP SIGN AND ONE-WAY SIGNS TO BE SALVAGED FOR RE-INSTALL.







1-800-705-1446


www.signaturestreetscapes.com

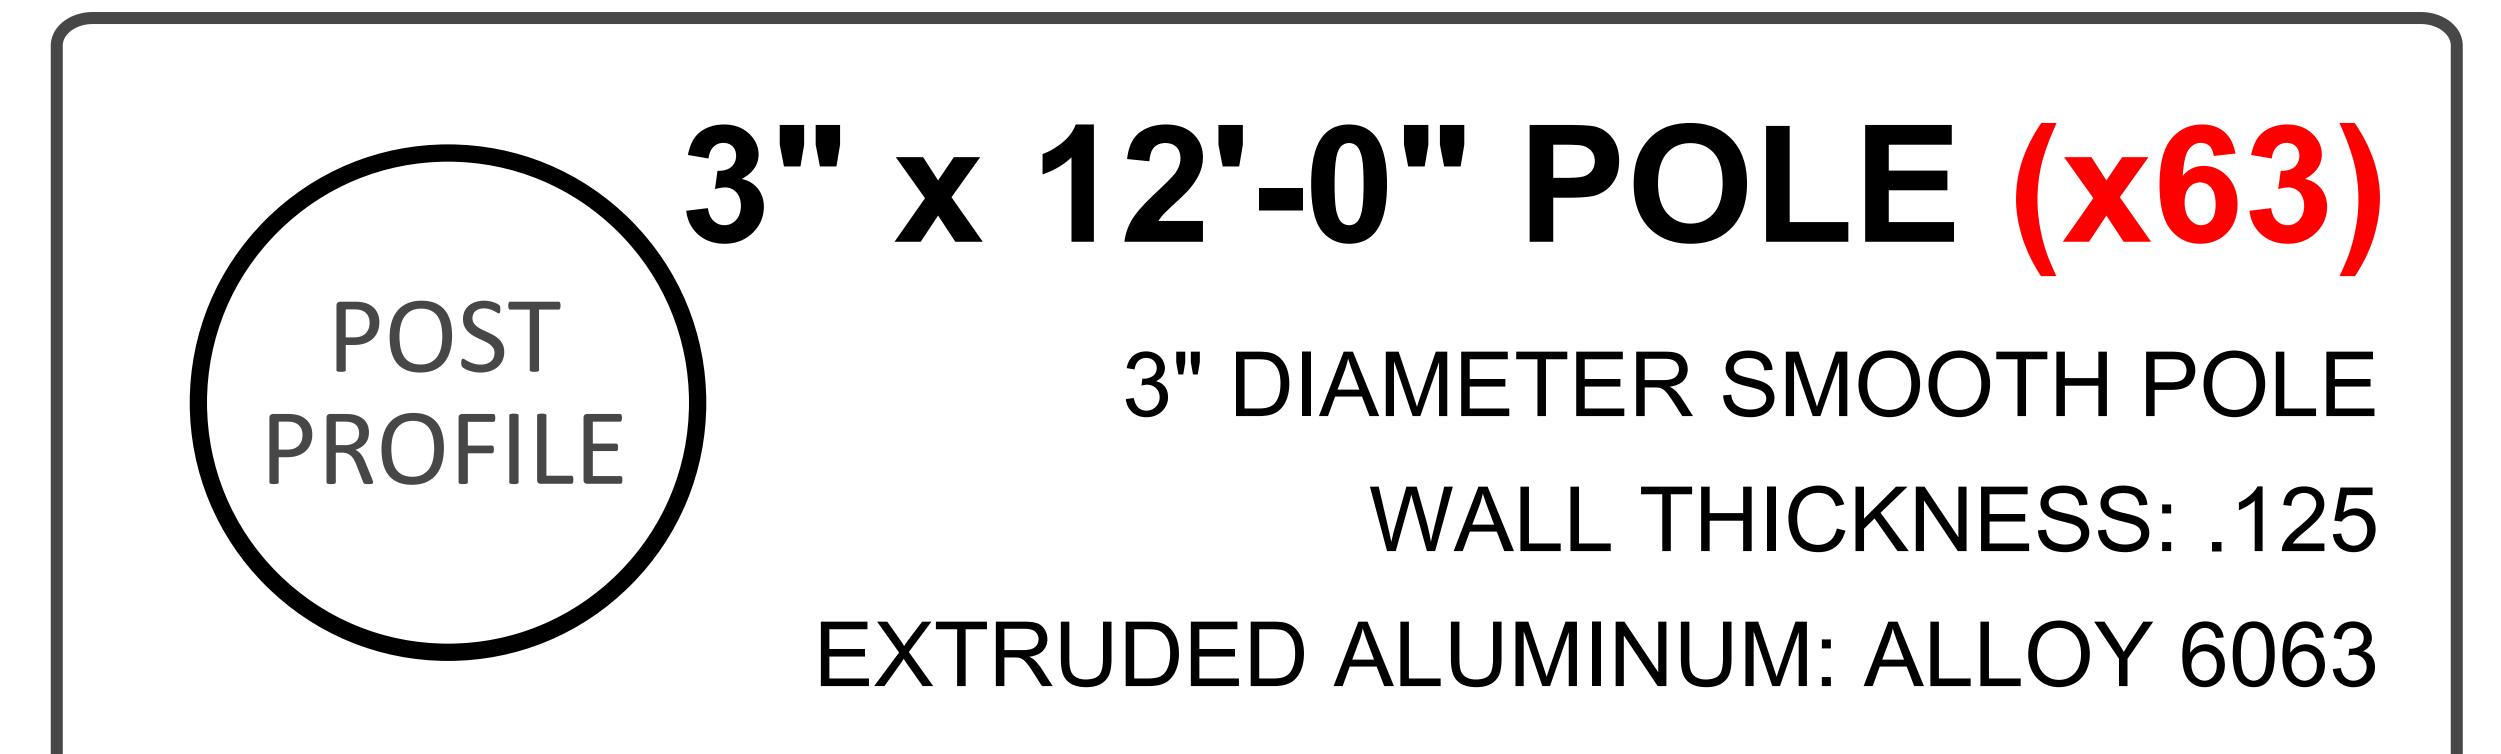

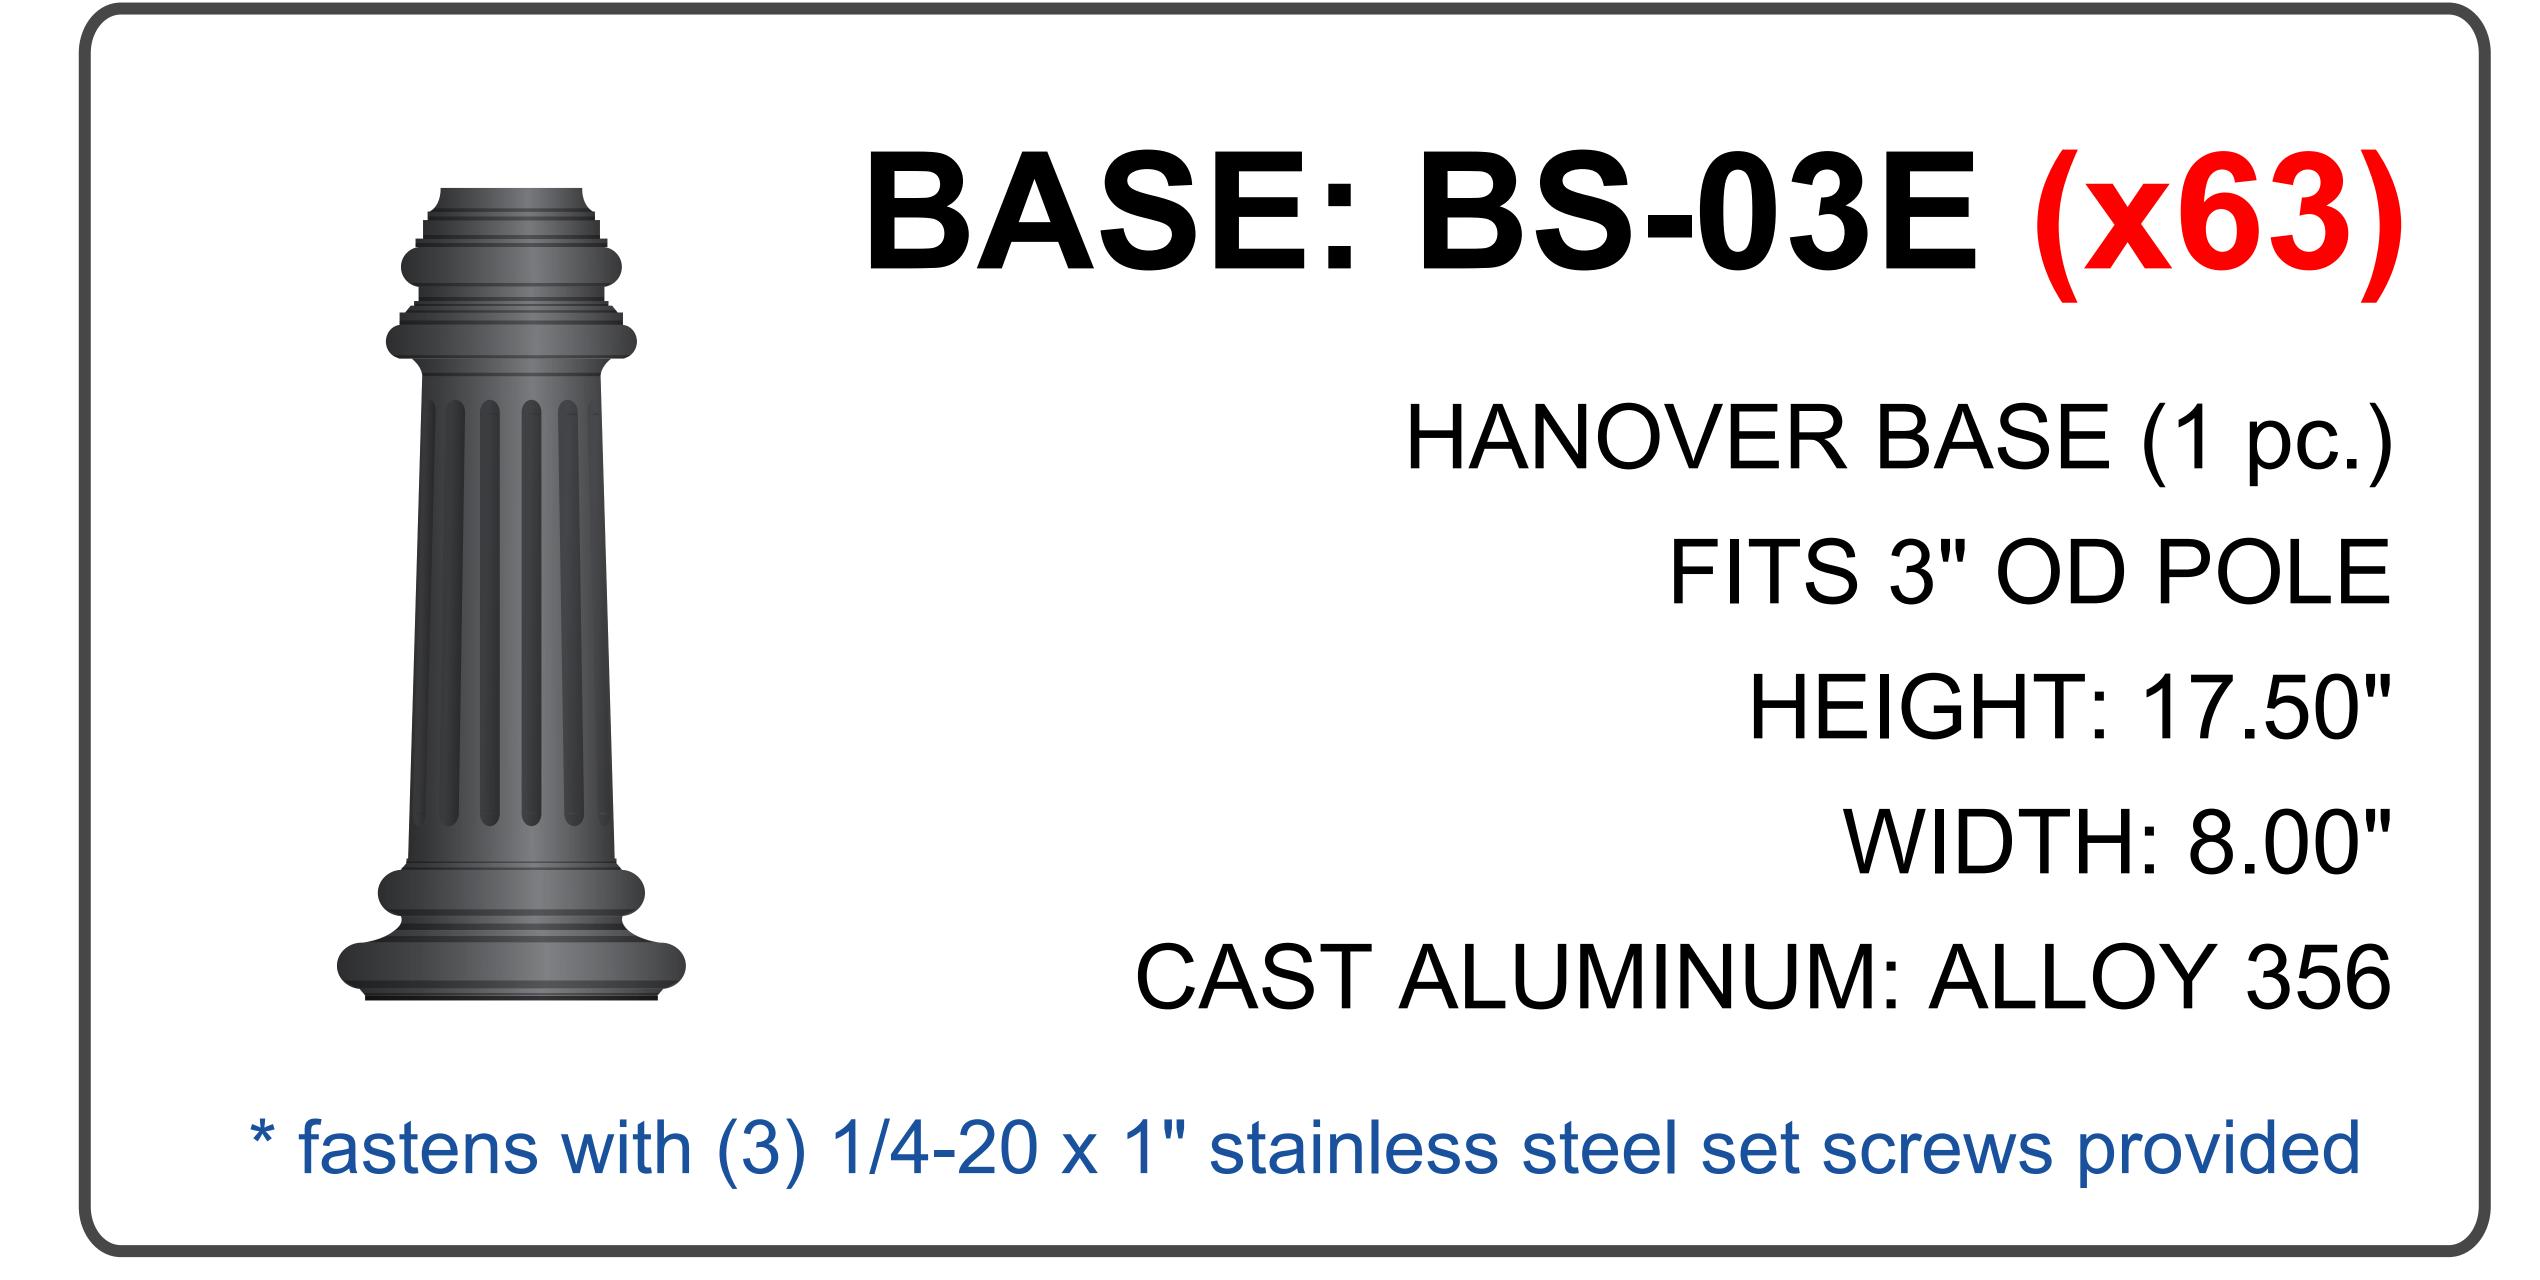

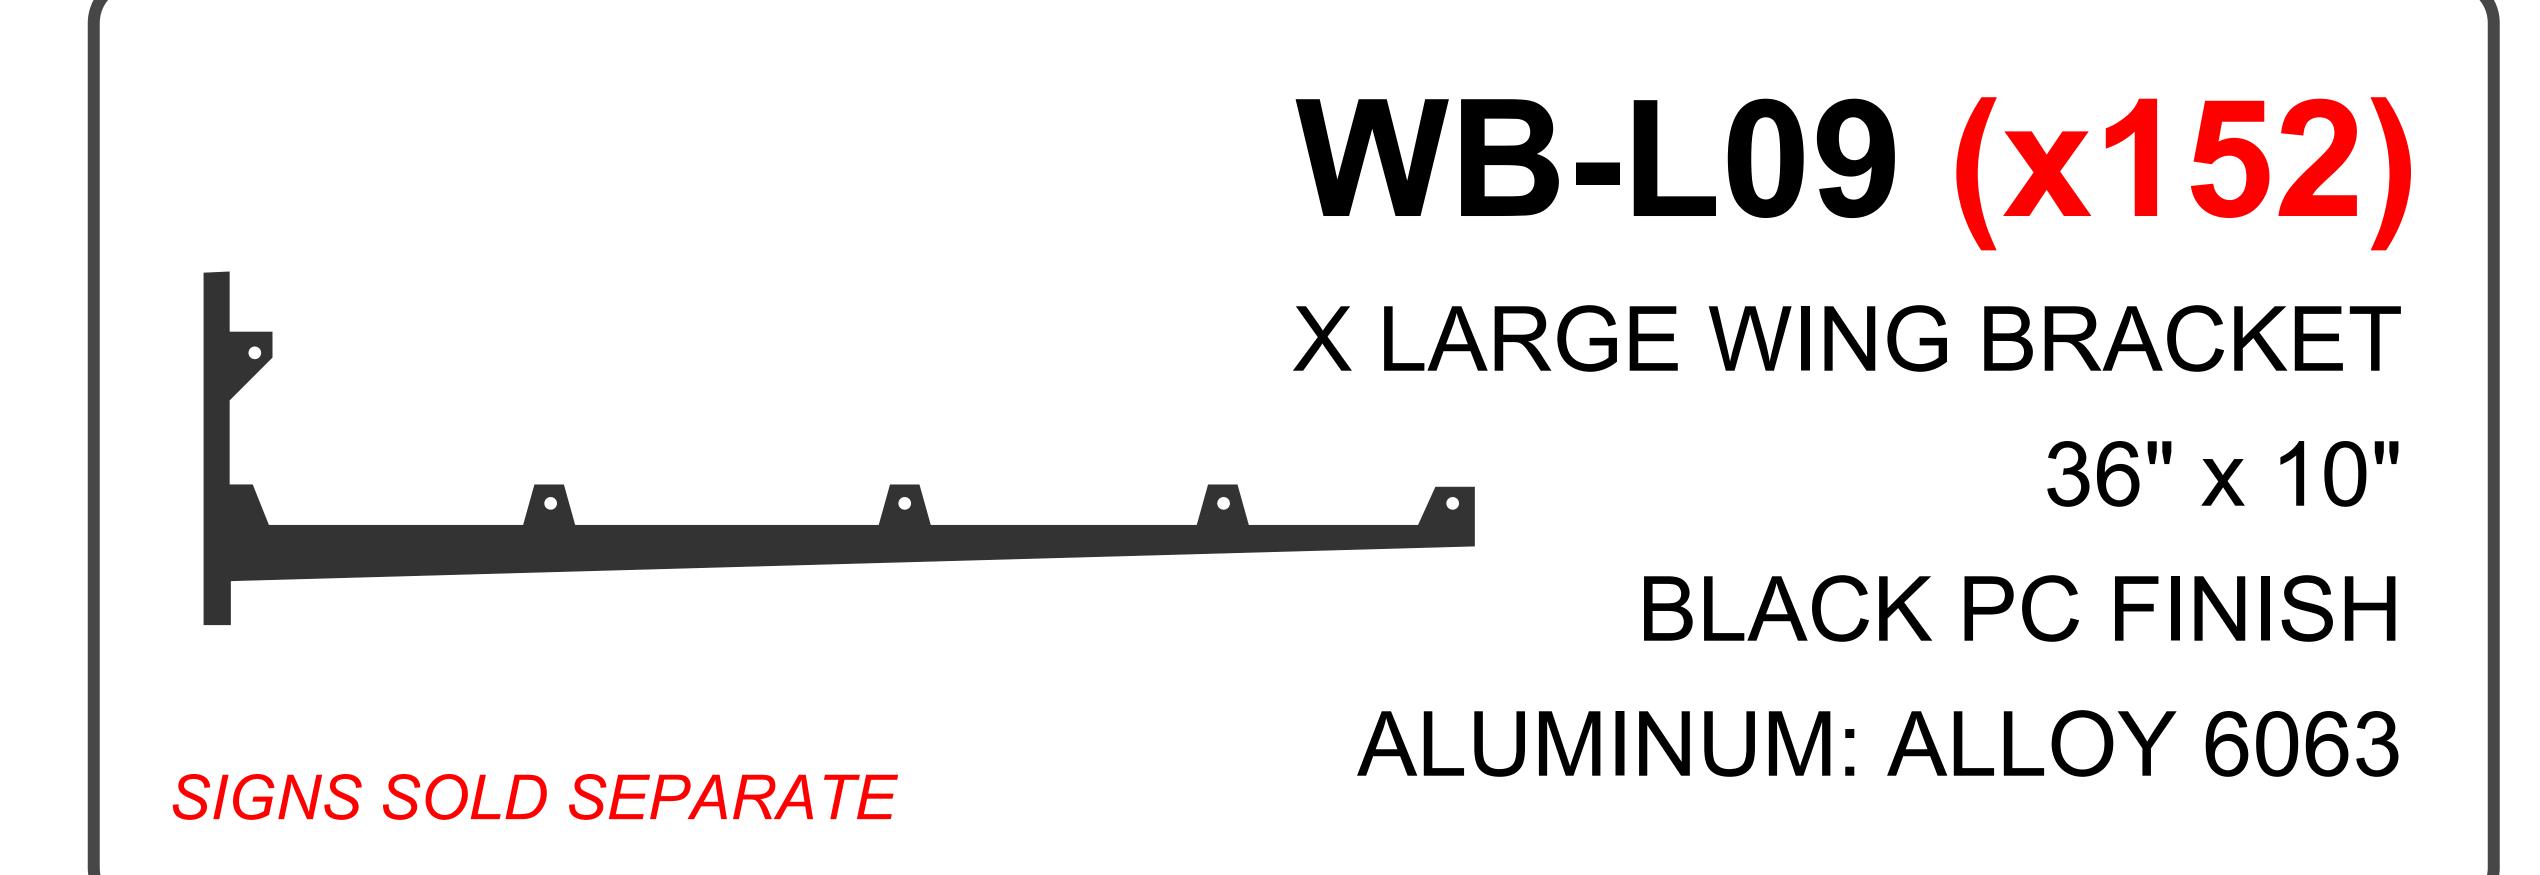

HISTORIC BOSTON-EDISON DISTRICT



Dent Breakaway Bolt ™ Installation Instructions

Step 1

New Installation: Go to step 2

Retrofit Instructions: Remove existing bolts

and spread plates (See Figure A)

Repair Instructions: Remove damaged

bolts by securing the bolt with a pair of vice grips and backing the nut off the bolt. (See

Figure B)

Step 2

Install the bolts with approved nuts and washers to the lower base plates. Tighten the nuts (See Figure C) NOTE: DO NOT HOLD THE TOP OF THE BOLT WHILE TIGHTENING THE BOTTOM NUT. HOLD BELOW THE BREAKPOINT, OR CRACKING COULD OCCUR

Step 3

Lower the sign structure plate onto the top portion of the bolts and install upper washer and nuts. (See Figure D)

If the keeper plate is damaged, it is not necessary to replace it. The bolts should be wrenched tightened to prevent the nuts from working loose. There are no torque requirements.

(All bolts must be in place before final tightening)

Special Notes:

- A. Approved nuts and washers are required
- B. Be sure to tighten nuts evenly in a diagonal pattern, on sides of the flange so that the two plates remain horizontal to each other.
- C. In the case of any discrepancies or defects, the engineer and manufacturer must be notified immediately
- D. Both plates must be clean and flat to prevent stretching of the bolt from the uneven section causing cracking

INFORMATION

DENT BREAKAWAY IND, INC. CLIFFORD DENT, INVENTOR

FAX: (413) 383-0681 Cell: (505) 486-0476

Email: info@dentbreakaway.com

Helps Save Ground Anchor & Post!

