


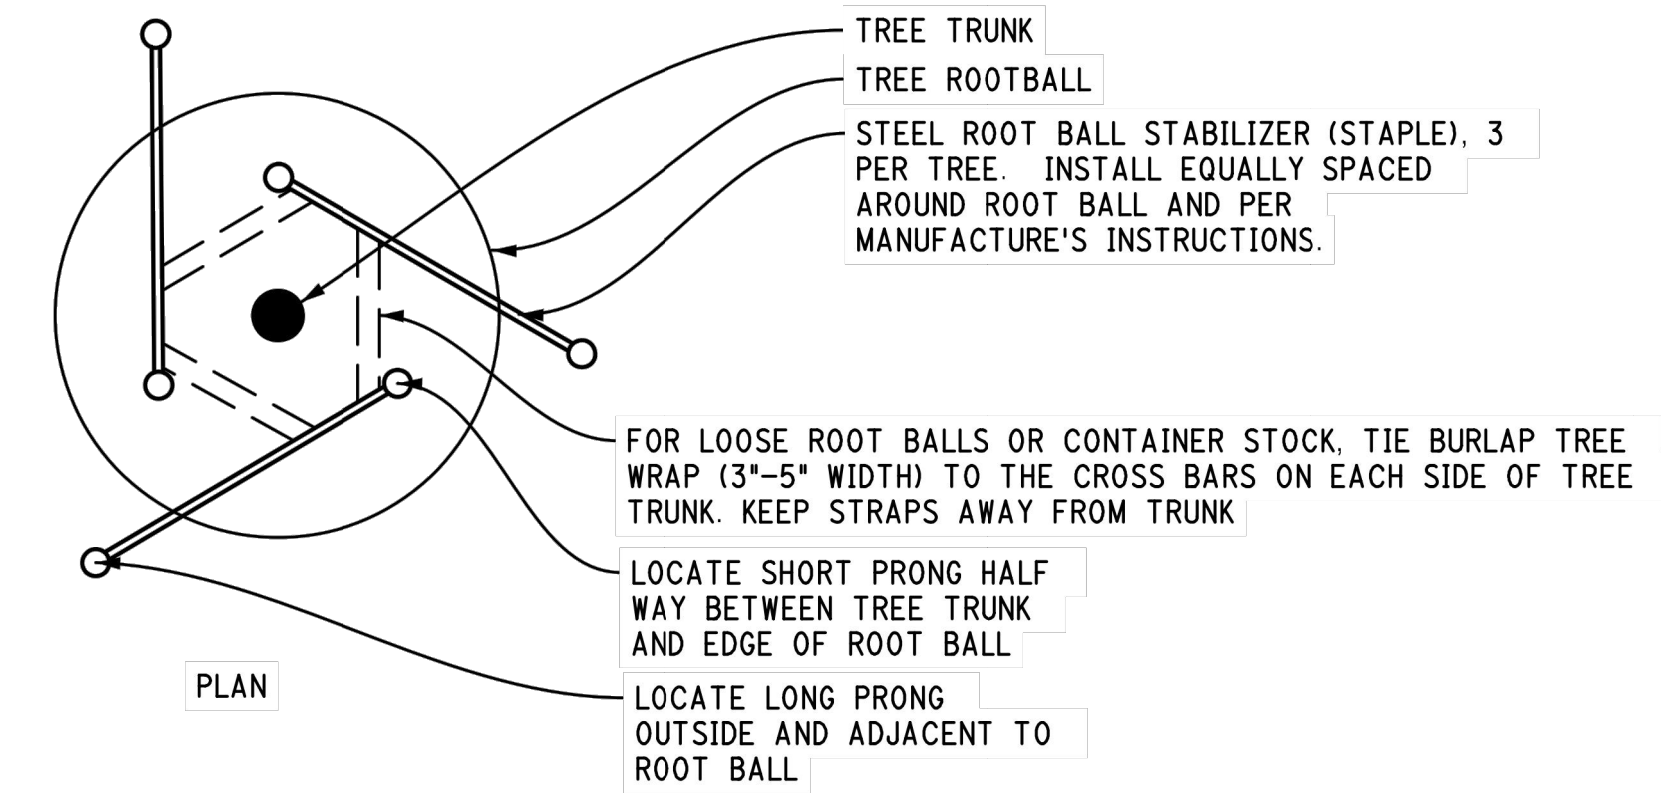
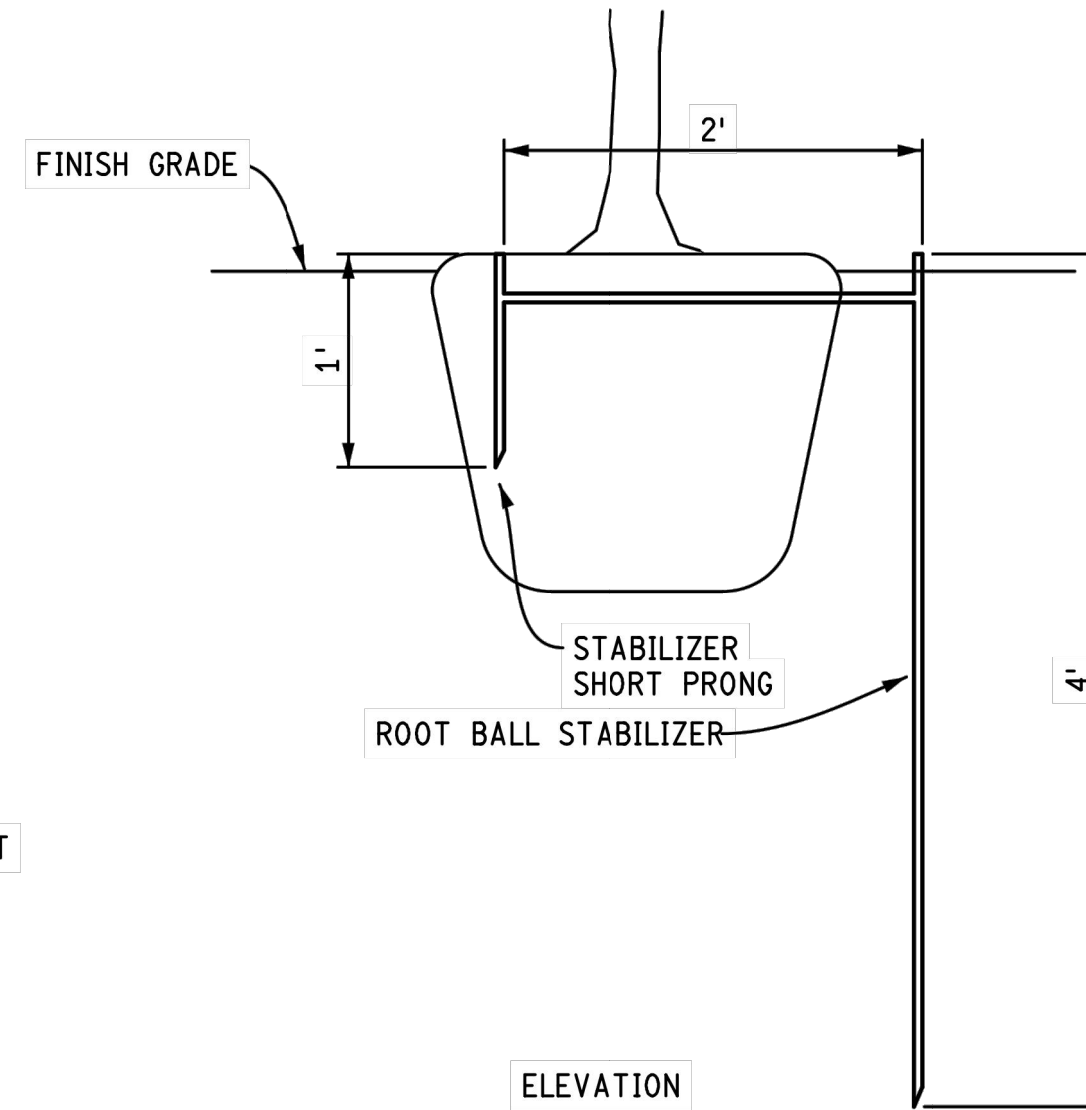


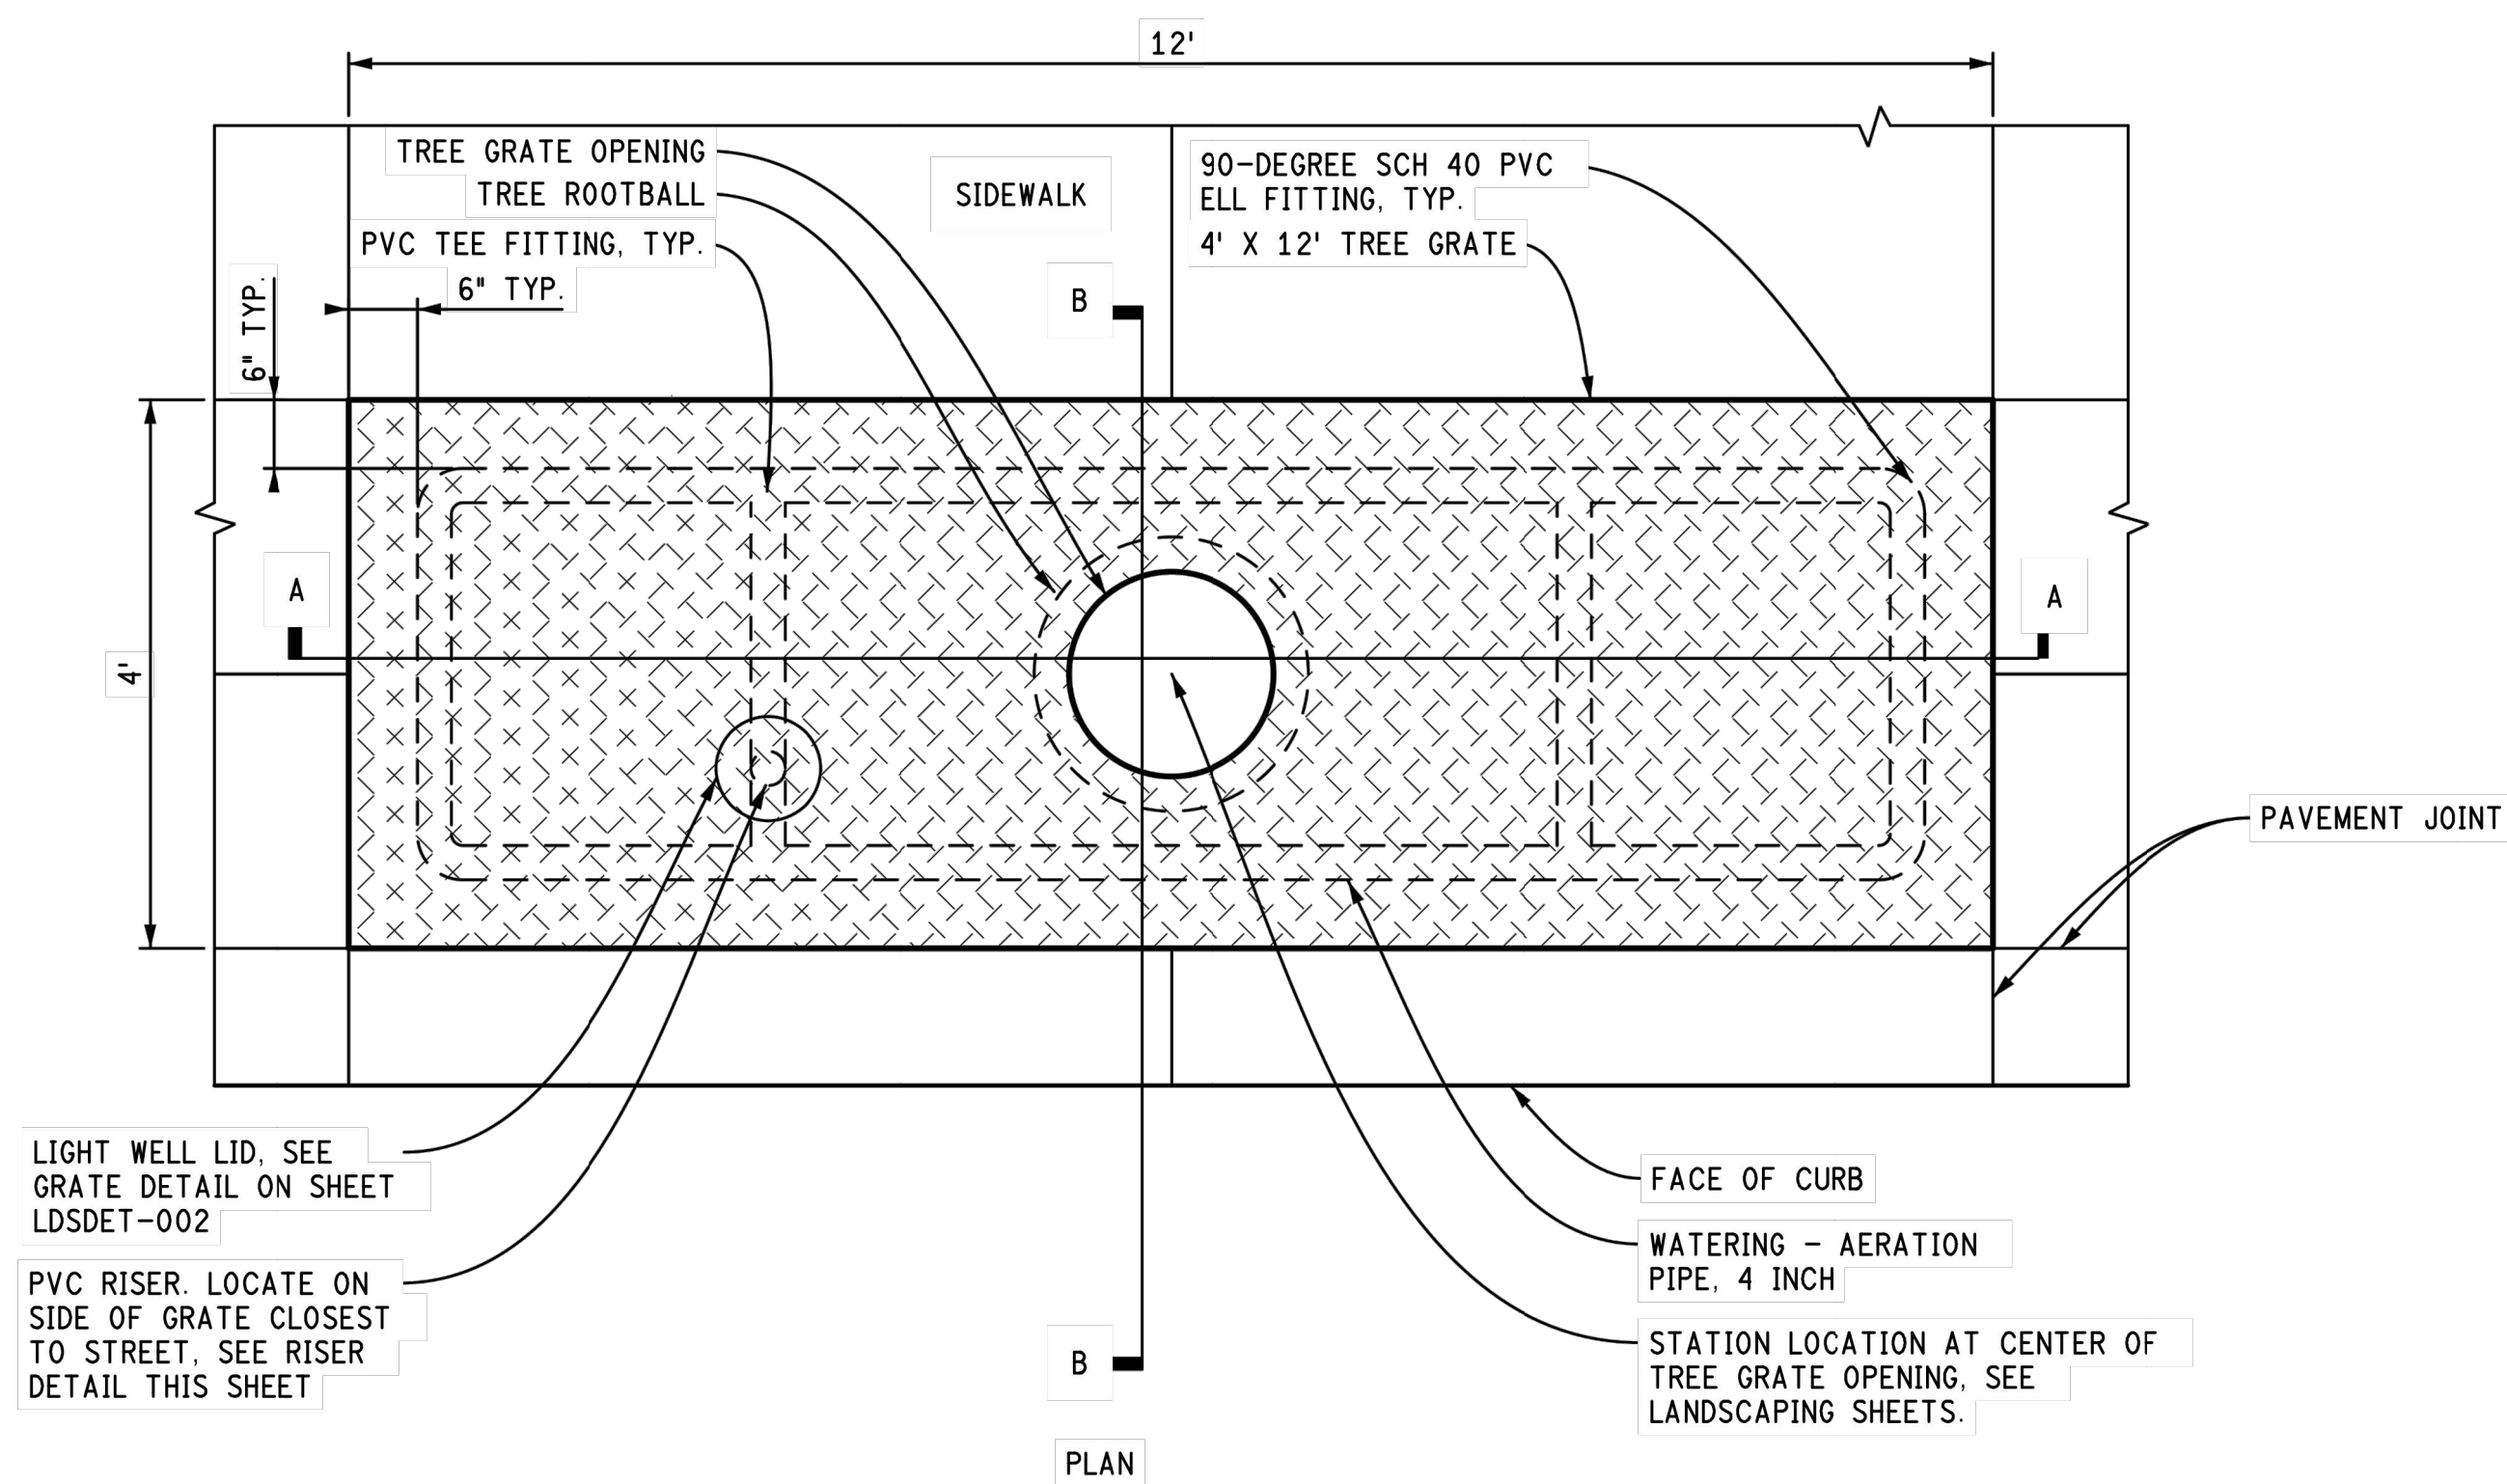

- NOTES:
1. ONCE STABILIZER IS INSTALLED CUT AWAY BURLAP FROM UPPER 1/2 OF ROOTBALL. LEAVE TREE WRAP INTACT WITHIN 3 INCHES OF STABILIZERS. PLACE MANUFACTURER SUPPLIED SAFETY CAP ON EXPOSED ENDS OF STABILIZERS.
 2. ROOT BALL STABILIZER SHALL BE BY TREE STAPLE, INC. OR APPROVED EQUAL.
 3. VERIFY LOCATION OF UTILITIES AND PLACE ROOT STABILIZERS TO AVOID CONTACT.

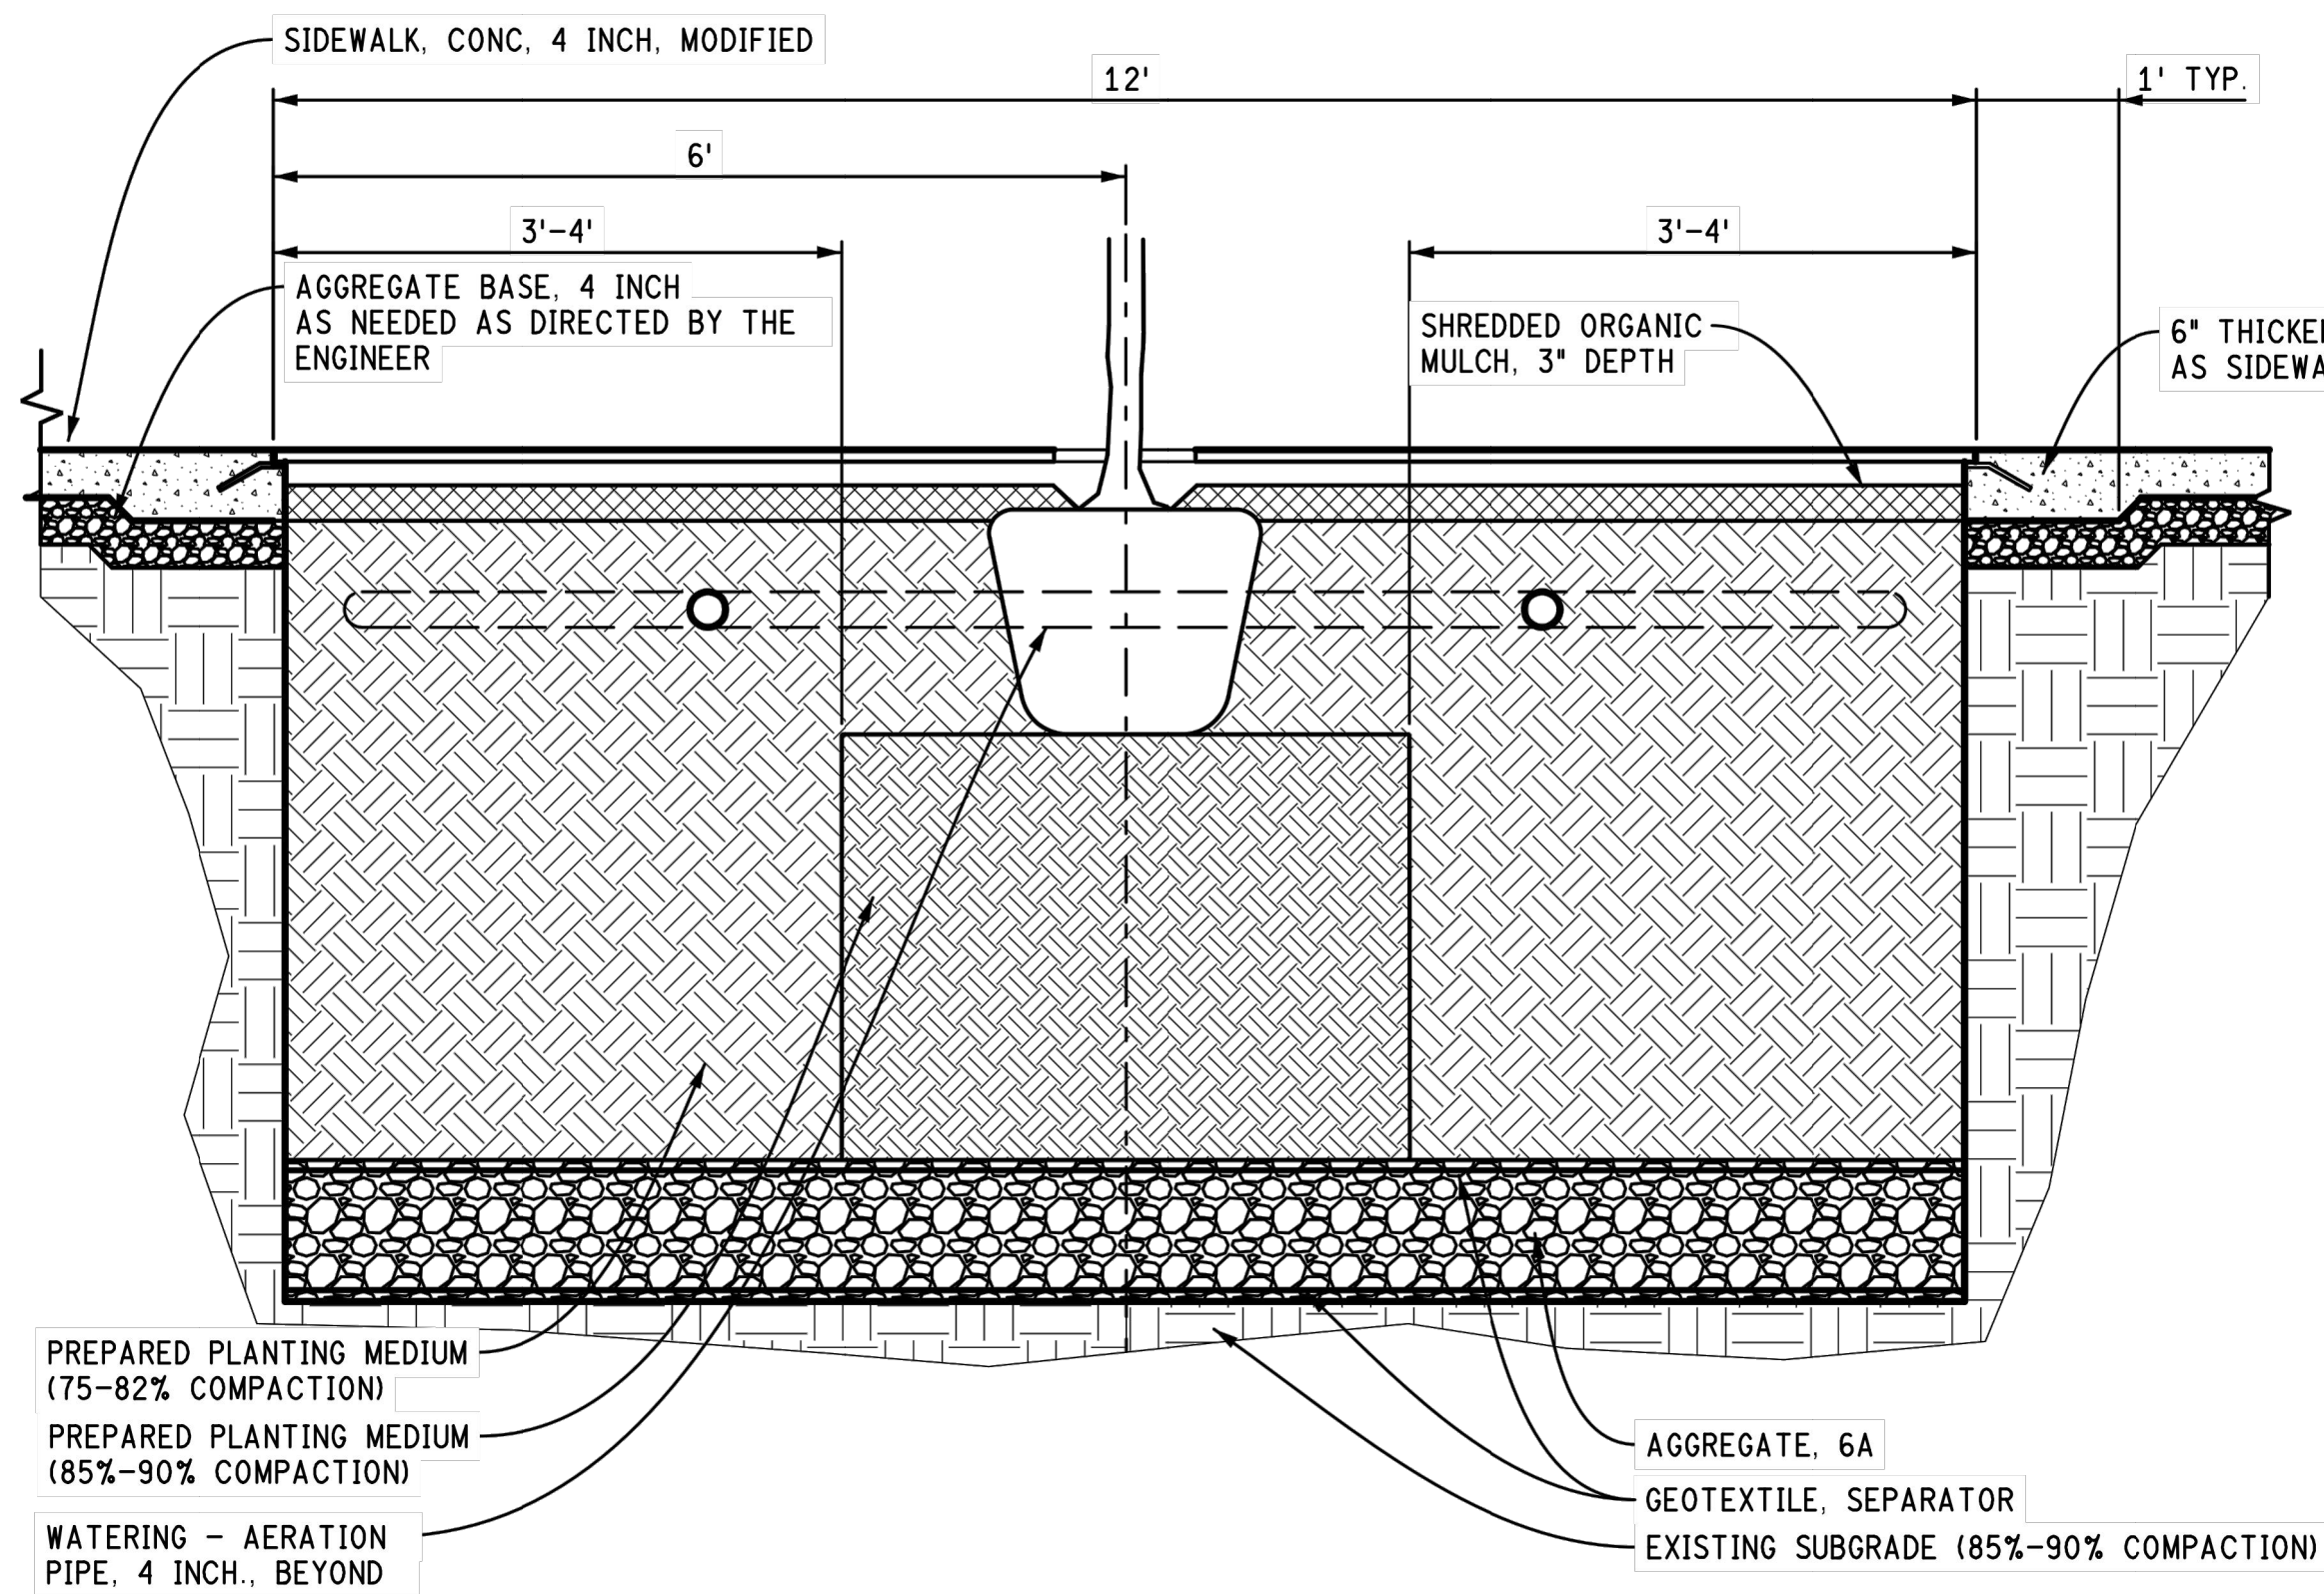

SECTION A-A

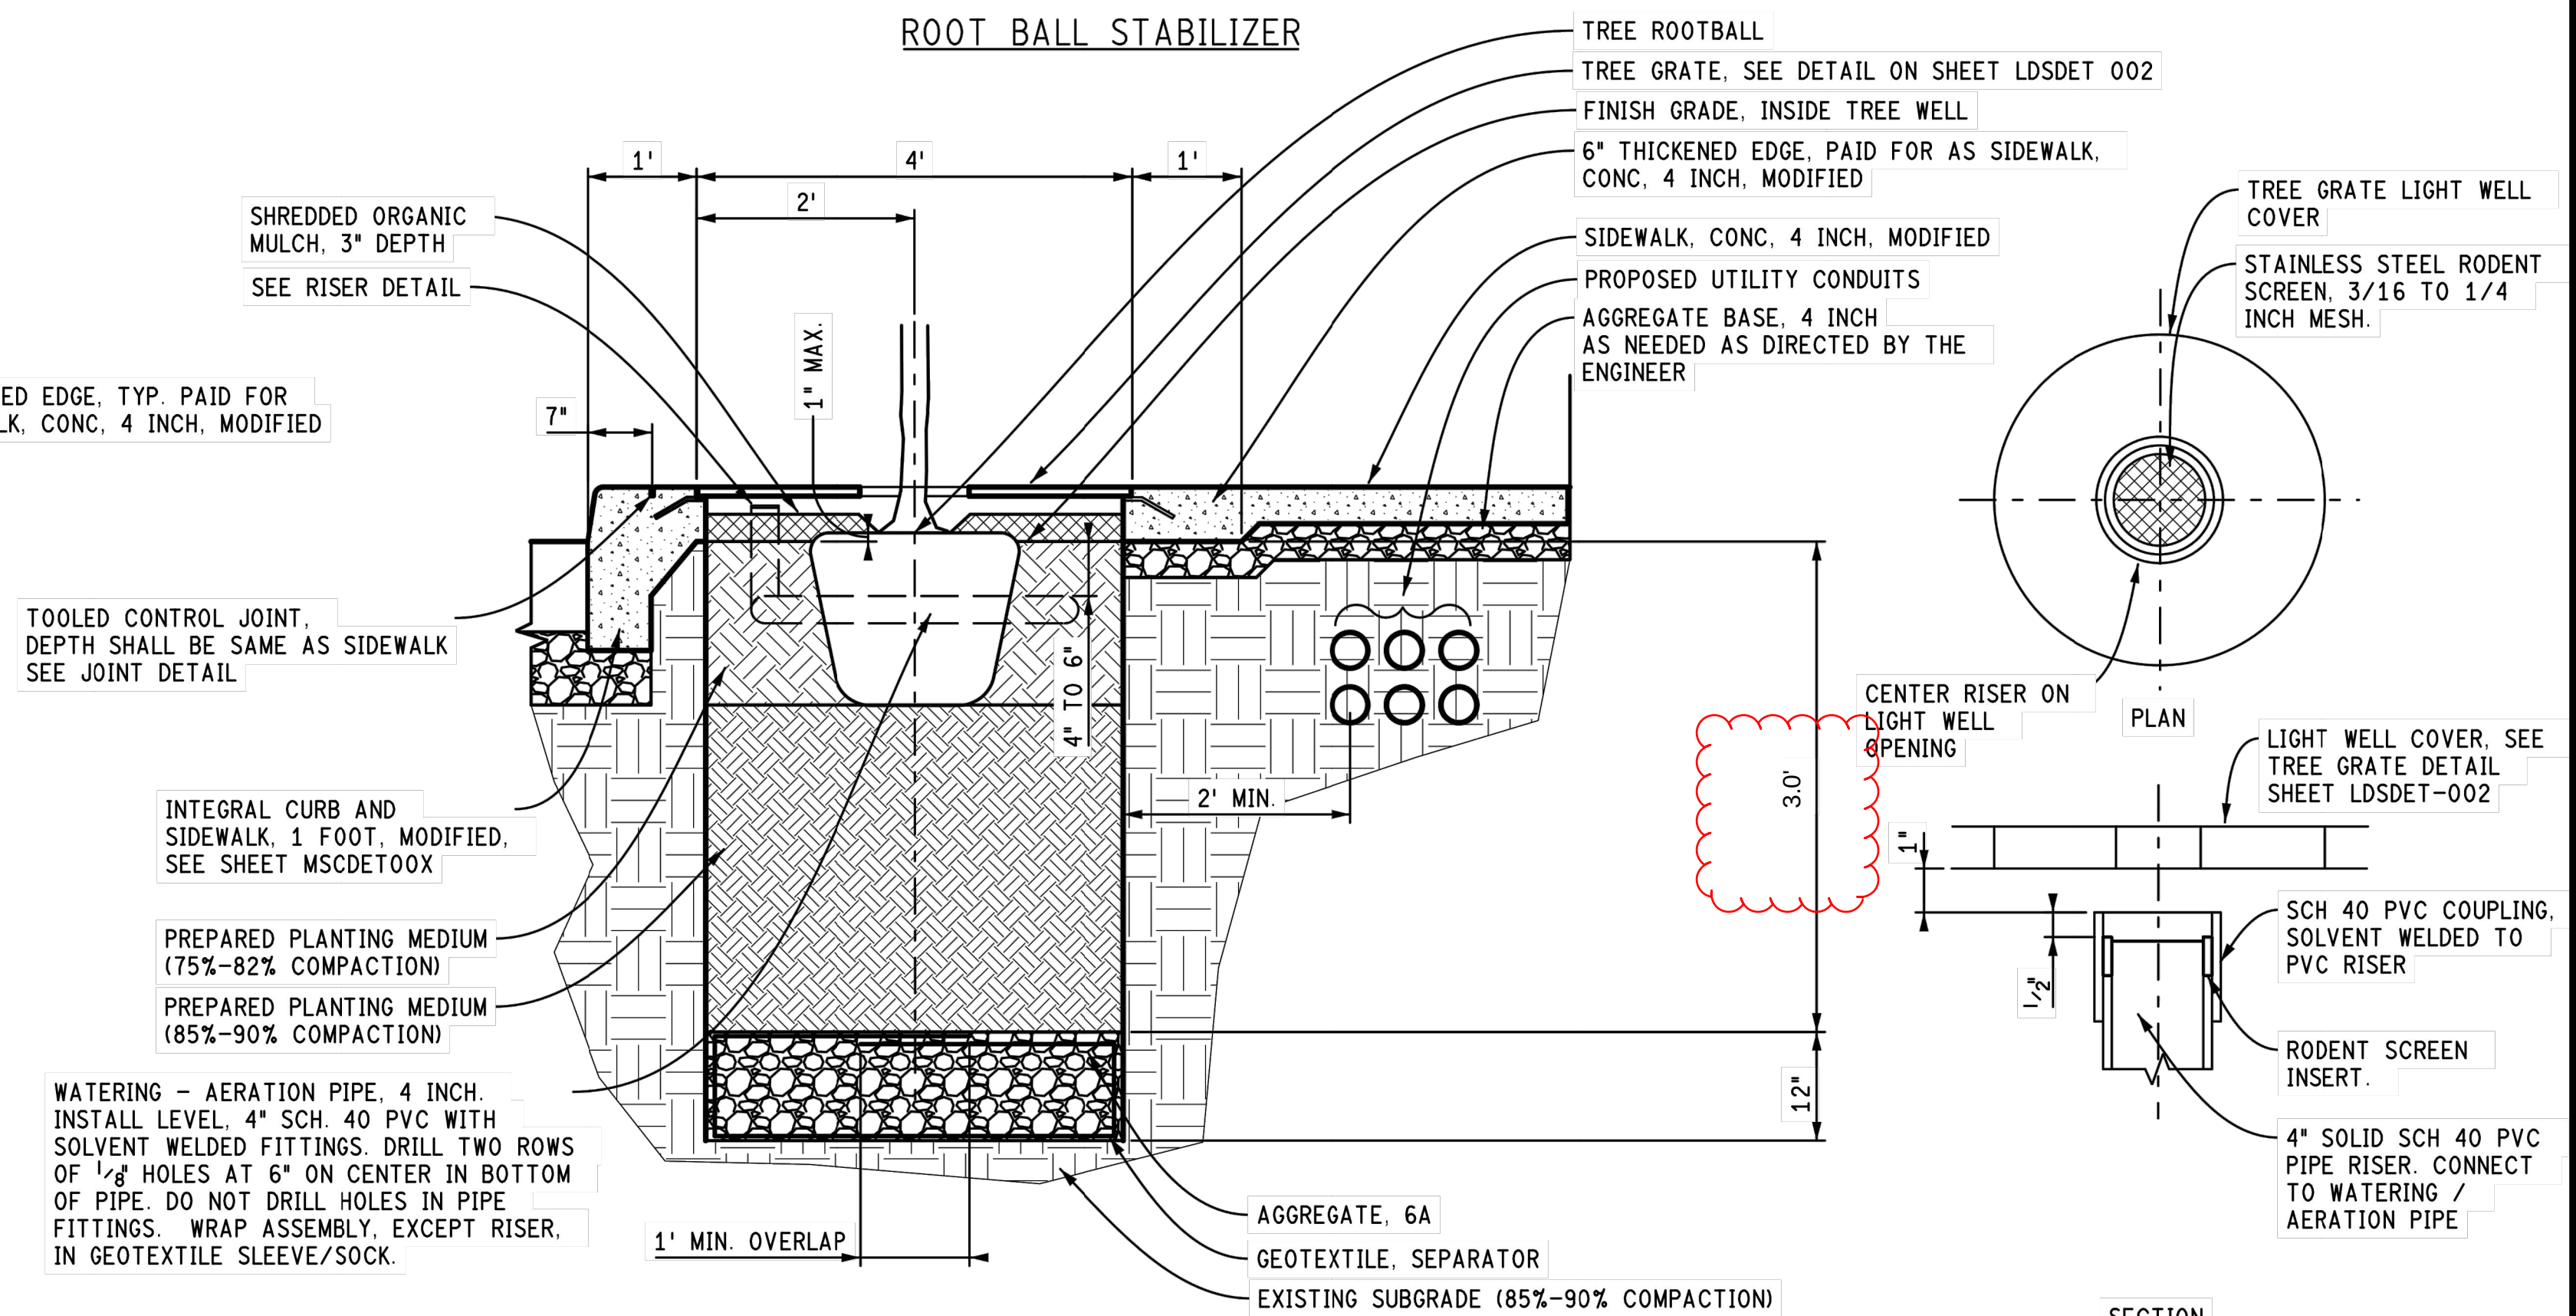

- NOTES:
1. SEE PLANTING NOTES ON SHEET LDSDET-002 FOR ADDITIONAL TREE PLANTING REQUIREMENTS.

- NOTES:
1. RODENT SCREEN BY NIXALITE OF AMERICA, INC. OR APPROVED EQUAL.

RISER DETAIL